




All controls on the front of the box are touch sensitive, tap symbol to cycle through settings.


Unit requires 6 x D cell (IEC R20) batteries or a mains unit (sold separately) to operate. To change batteries remove battery cover (no. 13) by removing battery cover fixing screw (no. 14) remove spent batteries, replace with new as per the diagram in the battery compartment, replace cover and fixing screw.

## Front

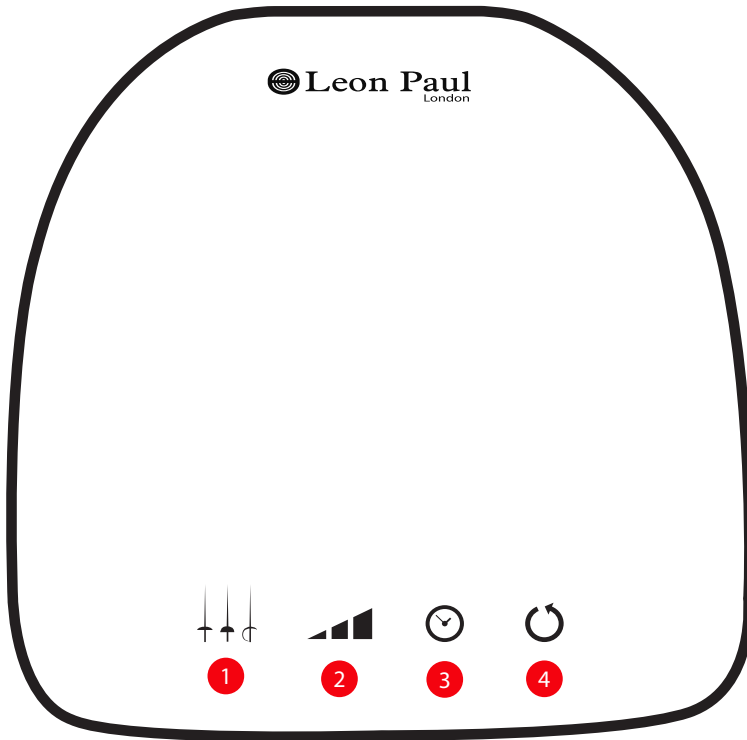

- 1 Weapon select (Foil, Epee, Sabre)
- 2 Volume control (Low, Medium, High)
- 3 Timer (Short, Medium, Infinite)
- 4 Manual reset (press once to re-set the scoring apparatus)
- 5 Fixing screws
- 6 Carry handle
- 7 5 pin Din Socket for extension lights

## Back

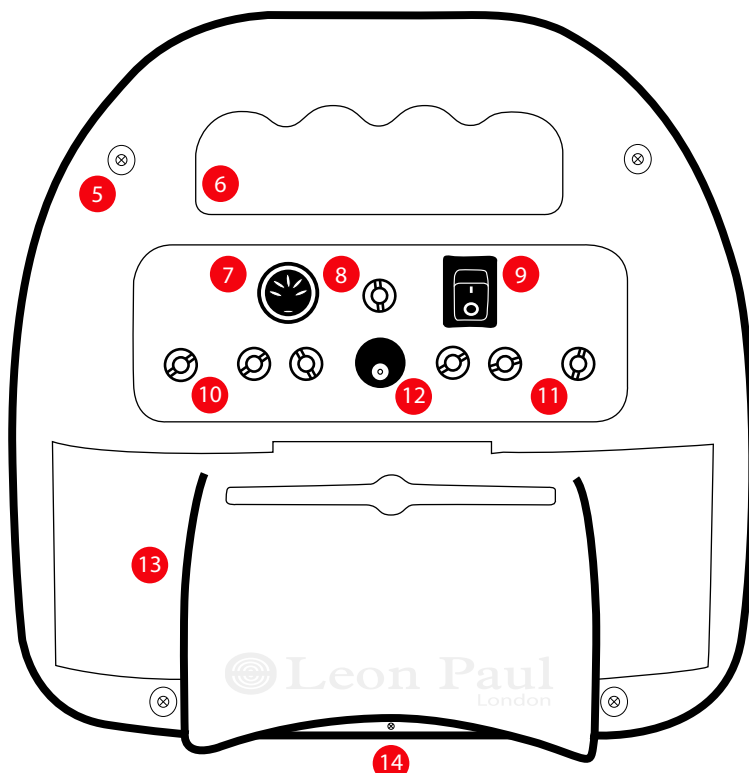

- 8 Piste lead
- 9 On/off switch
- 10 Right Spool
- 11 Left Spool
- 12 12v Dc mains adaptor
- 13 Battery cover
- 14 Battery cover fixing screw