

Battery low warning for the C630

The C630 has two methods of indicating that the batteries need replacing.

The first

- The two orange shorting lights (one on each side) will start flashing once every three seconds and will continue to do so until either the unit is connected to an external power source or the batteries are replaced with new ones.
- If you are practicing, you may want to continue to use the unit under the premise that the timings and or the scoring may not be performing 100% accurately.
- If this is during a competition where the timings and accuracy are important, then replace the batteries or connect to an external supply immediately.

The second

- The two orange shorting lights (one on each side) will flash four times in quick succession before shutting down permanently.
- This is to say that the unit will no longer function because the batteries are completely dead.
- This will normally happen after the shorting lights have been flashing on and off for a few hours first.